GUIDE FOR THE VMIBE/AAIBE SOFTWARE UPGRADE

- 1. The establishment for VMIBE/AAIBE Monitor Program
 - RS-232C cable
 - PC/Notebook
 - VMIBE/AAIBE Board

The one side of Rs-232 cable should be connected to a VMIBE/AAIBE, and the other side of it should be connected to a PC.

2. After setting up, turn on the system, the initial screen of VMIBE/AAIBE Monitor Program will be displayed on the hyper terminal.

1) VMIBE

🇞 vmibe - 하이퍼터미널 파일(F) 편집(E) 보기(⊻) 전화(C) 전송(I) 도움말(出)	
VOICE MAIL INTERFACE BOARD	<u> </u>
+==================================	=====+
Please press 'Ctrl+D' for Trace On and Off (Toggle	Key)
Please type password to enter monitor program	
 	=====+
Copyright © 2003 LGE All Rights Reserved.	
Website: http://bcs.lge.com	
+==================================	=====+
Version : DX30E-3.0A	
Released on 15th April 2004	
+=====================================	=====+
DSP No.2 INIT SUCCESS	
연결 4:12:31 자동 감지 19200 8-N-1 SCROLL CAPS NUM 1캡 반향	

2)AAIBE

冬 vmibe - 하이퍼터미널 파일(E) 편집(E) 보기(V) 전화(C) 전송(I) 도움말(H)
□
AUTO ATTENDANT INTERFACE BOARD
Please press 'Ctrl+D' for Trace On and Off (Toggle Key) Please type password to enter monitor program
Copyright © 2003 LGE All Rights Reserved. Website: http://bcs.lge.com
Yersion : GS30E-3.0A Released on 15th April 2004
DSP No.1 INIT SUCCESS DSP No.2 INIT SUCCESS
▲ 연결 4:50:56 자동 감지 19200 8-N-1 SCROLL CAPS NUM 캡 반향

3. Please type the password ('**millionire**'). With correct password, you can see the screen as shown below.

🗞 vmibe - 하이퍼터미널	_ 🗆 ×
파일(E) 편집(E) 보기(⊻) 전화(C) 전송(T) 도움말(出)	
+=======+	
WELCOME TO LDK-50/100/300/600 YMIBE MONITOR V 1.1	
📕 * If you need help, please type '?'	
* 'X' to exit monitor program	
Copyright 🔘 2003 LGE All Rights Reserved.	
More Information, Email To jhkim99@lge.com	
+=============+	
MONITOR>	
•	
면결 4:18:28 자동 감지 19200 8-N-1 SCROLL CAPS NUM 캡 반향	11.

4. If you type the character "?", you can see the monitor Command List.

4	웒vmibe - 하이퍼터미널	_ 🗆 ×
	파일(E) 편집(E) 보기(V) 전화(C) 전송(I) 도움말(H)	
	MONITOR> ?	
	Monitor Command List: ? - Help Menu d [addr1] [addr2] - Dump Memory x - Exit Monitor z - Start Z-modem	
	MONITOR> _	₹
	▲ 편결 4:21:38 자동 감지 19200 8-N-1 SCROLL CAPS NUM 1캡 1반향	

5. The command for software upgrade is 'z'.

If you type the character 'z', you can see the following screen.

🌯 vmibe - 하이퍼런미널		_ 🗆 X
파일(Ĕ) 편집(Ĕ) 보기(⊻)	전화(<u>C</u>) 전송(<u>T</u>) 도움말(<u>H</u>)	
02 28 00		
MONITOR> z		_
COMMAND	DESCRIPTION	
e C S	erase flash rom change baud rate show baud rate	
U V X	erase & write flash rom verify checksum Exit	
z ? or h	down load with zmodem Help, Guide	
MONITOR>UPGRADE	>	
【▲】 연결 4:22:25 지동 감지 15	2200 8-N-1 SCROLL CAPS NUM 캡 반향	

6. Type the character 'z' once again, and the monitor program will ask the "yes" or "no" of z-modem execution. If you type the character 'y(yes)', it is displayed the comment 'NAND Flash erasure has been finished..'.

And then, click the menu tab 'Transfer (T)' on the hyper terminal screen,

Select the menu 'Transfer files (S)'

🐣 vmibe - 하이퍼터미널	
파일(E) 편집(E) 보기(V) 전화(C) 전송(T) 도움말(H)	
MONITOR>UPGRADE> z	
Download with baudrate[19200 bps] To continue, please type Yes[y], or No[n]::y	
Now, erasing NAND Flash Please, wait a while	
NAND Flash erasure has been finished	
Send file with zmodem (1 / 3) <u>**</u> B00000027fed47fed4	
▲ 연결 4:24:15 자동 감지 19200 8-N-1 SCROLL CAPS NUM 캡 반향	¥

7. Search and enter the path of the upgrading software and click the Send (S).

👧 파일 보내기			? X
폴더: N:₩PP₩NV	MIB₩Work₩QE	lst₩IP_LDK Mlu₩	/RELEASE
파일 이름(<u>F</u>): N:₩PP₩NVMIB₩W	/orl/\UDE1st\UDE		찾아보기(<u>B)</u>
프로토콜(P):			
Zmodem			•
	보내기(<u>S</u>)	달기(<u>C</u>)	취소

8. Transmission will be on via Z-modem as the following screen,. Total estimated time of transmission is about 15 or 16 minutes (Baud Rate 19200).

vmibe에서 Zmodem 파일 보내기			
보내는 파일:	N:\PP\NVMIB\Work\QE1st\IP_LDK_MIu\RELEASE\GS30E30A,bin		
마지막 이벤트:	보내는 중	파일 수:]/1
상태:	보내는 중	다세 세로:	<u>(</u>
파일:		16k / 180	28
경과 시간:	00:00:07 남은 시간: 00:14:08	처리 속도:	2155 cps
		취소	cps/bps(<u>C</u>)

9. Type the character 'y' after completing download. The 2nd, 3rd, and 4th LED of VMIBE/AAIBE will be on and off during Flash ROM erasure. Subsequently, whole LED will be on and off while inspecting Flash ROM. Finally, the 5th, 6th, 7th, and 8th LED of VMIBE/AAIBE will be on and off during software upgrade on Flash ROM.

Numibe - 하이퍼터미널	ΠX
_ 파일(E) 편집(E) 보기(⊻) 전화(C) 전송(T) 도움말(H)	
To continue, please type Yes[y], or No[n]::y	
Now, erasing NAND Flash Please, wait a while	
NAND Flash erasure has been finished	
Send file with zmodem (1 / 3) **B00000027fed4 Download0K	
Downloaded Data checksum is: 5D0C	
Starting Flash Upgrade !!! This will upgrade your System by programming flash memory To continue, please type Yes[y], or No[n]::_	-
◀ 연결 4:46:56 자동 감지 19200 8-N-1 SCROLL CAPS NUM 캡 반향	• //

10. As soon as the software upgrading is done, VMIBE/AAIBE will be reset automatically.

Then, the initial screen will be displayed again.

◆wmibe - 하이퍼터미널 □□ 파일(F) 편집(E) 보기(V) 전화(C) 전송(I) 도움말(H) □ ☞ 종 종 • 감	×
+========+	•
VOICE MAIL INTERFACE BOARD	
 +========+	
Please press 'Ctrl+D' for Trace On and Off (Toggle Key) Please type password to enter monitor program	
Copyright © 2003 LGE All Rights Reserved. Website: http://bcs.lge.com	
Yersion : GS30E-3.0A Released on 15th April 2004	
+=================+ DSP No.1 INIT SUCCESS DSP No.2 INIT SUCCESS	•
▲ 연결 4:49:57 자동 감지 19200 8-N-1 SCROLL (CAPS NUM 캡 반향	